


TollFree: (800) GO-SWING or  
(800) 467-9464  
Fax: (866) 873-3537  
E-mail: [childlifecs@escaladesports.com](mailto:childlifecs@escaladesports.com)  
Home Page: [childlife.com](http://childlife.com)

## TRIPLE WAVE SLIDE

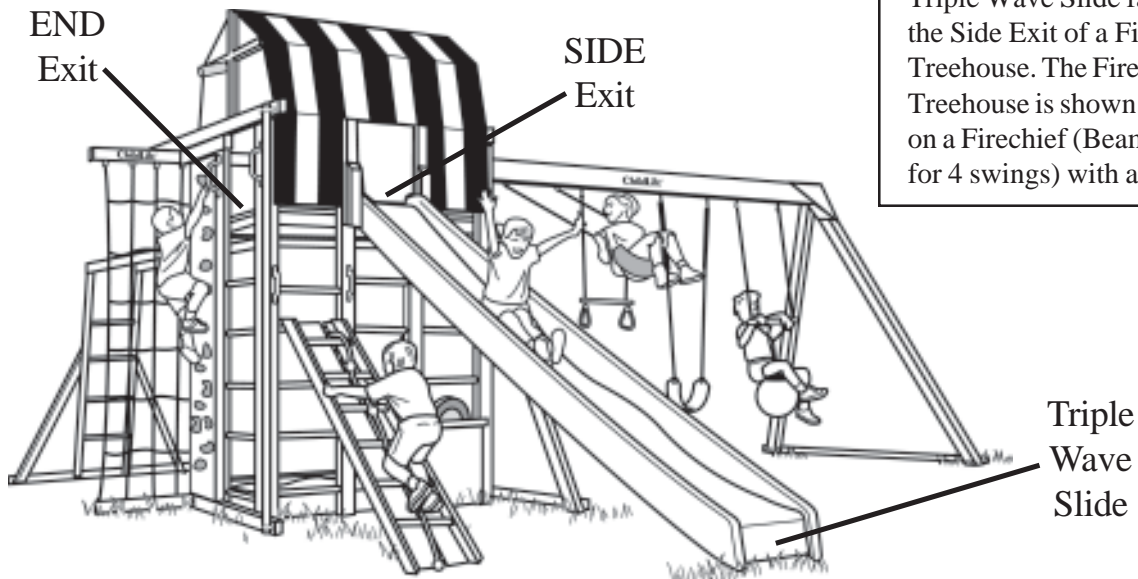

Congratulations and thank you for purchasing a fine ChildLife® brand play system!

Please read this instruction sheet completely before starting assembly.

**DO NOT** allow any use of the equipment until it been completely assembled and installed in accordance with these instructions. Serious injury could result.

Please keep a copy of your order and our catalog with this sheet for future reference.

**Continued on reverse. If the reverse is blank, do NOT install your Slide.  
Call ChildLife immediately for a free replacement copy of these instructions.**

The Triple Wave Slide is an add-on to your ChildLife play system. Either a Crow's Nest Treehouse or a Firechief's Treehouse is **required** for the safe installation and use of the Triple Wave Slide. This slide can also be used on Denali and Everest play systems. These assembly instructions must be used in conjunction with the Assembly Instructions and Owner's Manual of the play system and/or treehouse you have purchased.

Refer to the Assembly Instructions and Owner's manual of the play system you have purchased for very important information you need to know:

- Choosing a Safe Installation Site
- Safety During Installation
- Tools Required
- Hardware and Safety Nut Information
- Maintenance Instructions
- Instructions for safe use

Please be sure you read and understand our recommendations for safe installation sites and safety during installation, as well as the US Consumer Products Safety Commission's recommendations concerning the depth of various resilient surfacing materials. If you do not have the Assembly Instructions and Owner's Manual of the play system you have purchased, which contains this important information, contact ChildLife Inc at (800) 467-9464 or (508) 429-4639 for a free replacement copy.

### **Fasten Slide to your Play System.**

Hook the top of the Slide to the desired rung on your play system approximately 6' off the ground. See the illustration below.

See the ChildLife Backyard Play System catalog for suggested attachment points, and if you have any questions at all call ChildLife or your local dealer.

On any play system with a **Crow's Nest Treehouse**, the Slide should fasten directly below the trap door opening into the Crow's Nest Treehouse. Make sure that one of the Adjustable Platforms, that came with your play system, is fastened as instructed to the rungs at 6' high, providing a stable platform at the top of the Slide. On any play system with a **Firechief's Treehouse**, the Slide may fasten at the Side Exit (as shown in the illustration on the reverse) or at the End Exit. See your Firechief's Treehouse Instruction Manual for further details. On **Denali** and **Everest** play systems, fasten the Slide to the Slide Rung after installing it as instructed.

With the Slide hooked and resting on the selected rung, pull the bottom of the Slide out and away from the play system to ensure that the hook molded into the Slide is **firmly seated against the rung**.

Check the Slide monthly during the useage season to ensure that it is securely fastened. Make sure children follow the instructions for safe use that pertain to slides found in the Owners Manual of the play system you have purchased. If you do not have this, call ChildLife for a free replacement copy.

