


# ZigZag Ramp

This illustration shows the ZigZag Ramp installed at the rear section of the Mt. Shasta system.

**ZigZag  
Ramp**

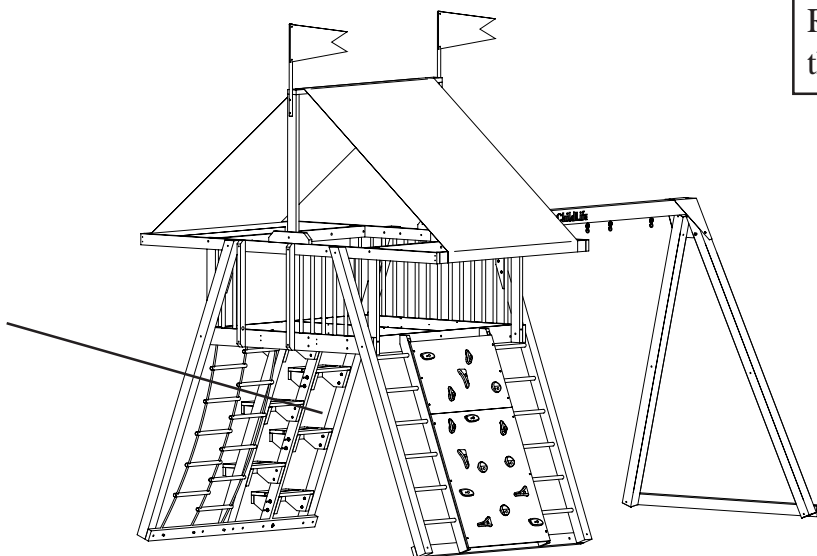

---

Congratulations and thank you for purchasing a fine ChildLife® brand play system!

Please read this instruction sheet completely before starting assembly.

**DO NOT** allow any use of the equipment until it has been completely assembled and installed in accordance with these instructions. Serious injury could result.

Please keep a copy of your order and our catalog with this sheet for future reference.

**Continued on reverse. If the reverse is blank, do NOT install your ZigZag Ramp.  
Call ChildLife immediately for a free replacement copy of these instructions.**

---

The ZigZag Climber is an add-on to your ChildLife play system. These assembly instructions must be used in conjunction with the Assembly Instructions and Owner's Manual of the play system you have purchased.

Refer to the Assembly Instructions and Owner's manual of the play system you have purchased for very important information you need to know:

- Choosing a Safe Installation Site
- Safety During Installation
- Tools Required
- Hardware and Safety Nut Information
- Maintenance Instructions
- Instructions for safe use

Please be sure you read and understand our recommendations for safe installation sites and safety during installation, as well as the US Consumer Products Safety Commission's recommendations concerning the depth of various resilient surfacing materials. If you do not have the Assembly Instructions and Owner's Manual of the play system you have purchased, which contains this important information, contact ChildLife Inc at (800) 467-9464 or (508) 429-4639 for a free replacement copy.

### Mounting your Zigzag Ramp (refer to the Figure)

1. Unpack the zigzag ramp components. Attach center support (and spacer on 7')

**NOTE: The zigzag ramp cannot be installed on the same end of the play platform as the permanent ladders.**

2. Mount the step assemblies (2) to the center support (1) so that the top step will be toward the center of the play platform. Use two carriage bolts (3) and safety nuts (6) to mount each step. Tighten the bolts and nuts securely.
3. Mount the zigzag support (1) and steps. Use one carriage bolt (4) and safety nut (6) at the top, and one carriage bolt (5) and safety nut (6) at the bottom. Tighten the bolts and nuts securely.
4. Use a spirit level to level each step. Mark the bottom edge position on the play platform upright.
5. Align each step with its mark and attach the step to the upright using two lag bolts (7) and flat washers (8). Tighten the lag bolts securely.

### Parts List

1.	2W-7730-01	Zigzag center support (5.5' Assy.)	(Qty 1)
	2W-7731-01	Zigzag center support (7.0' Assy.)	(Qty 1)
2.	4A-7337-00	Step assembly (5.5' Assy.)	(Qty 6)
	4A-7337-00	Step assembly (7.0' Assy.)	(Qty 7)
3.	1B-6688-00	Carriage bolt (5/16-18 x 2.5) (5.5' Assy.)	(Qty 12)
	1B-6688-00	Carriage bolt (5/16-18 x 2.5) (7.0' Assy.)	(Qty 14)
4.	1B-6689-00	Carriage bolt (5/16-18 x 2.75)	(Qty 1)
5.	1B-6694-00	Carriage bolt (5/16-18 x 5.75)	(Qty 1)
6.	2B-6207-00	Safety nut (5/16-18) (5.5' Assy.)	(Qty 14)
	2B-6207-00	Safety nut (5/16-18) (7.0' Assy.)	(Qty 16)
7.	1B-6716-00	Lag screw (5/16 x 3) (5.5' Assy.)	(Qty 12)
	1B-6716-00	Lag screw (5/16 x 3) (7.0' Assy.)	(Qty 14)
8.	2B-6224-00	Flat washer (5/16) (5.5' Assy.)	(Qty 12)
	2B-6224-00	Flat washer (5/16) (7.0' Assy.)	(Qty 14)
9.	2W-7763-01	Spacer Block (7.0' Assy. only)	(Qty 1)

